



Wired PRT Acquisition



1 Pick Well

Click on "Pick Well" button and select the well by double-clicking on the name

2 Select Dynamometer


Click on "Dynamometer" button

3 Pick Sensor

Click on "Pick a Sensor" button

Sensors are automatically selected. Select one if multiple are connected.

4 Install Sensor On Well

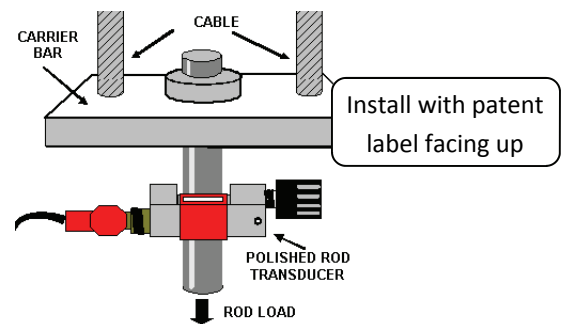

5 Start Acquisition

Click on "Setup PRT for New Test" button

When the circle stays solid green, click the "Continue" button start acquiring dynamometer data.

6 See Results in Real-Time

After two complete strokes the surface and pump dynamometer cards are displayed in real time. End Acquisition with the "Stop" button.

7 Get Report

Click on "Report" button

Report can be printed or emailed

Select stroke to be analyzed and include in report