



# Dynamometer Acquisition Quick Setup

((((ECHOMETER)))

## 1 Pick Well

Click on "Pick Well" button and select the well by double-clicking on the name

## 2 Select Dynamometer


Click on "Dynamometer" button

## 3 Pick Sensor

Click on "Pick a Sensor" button

Sensors are automatically selected. Select one if multiple are connected

## 4 Install Sensor On Well

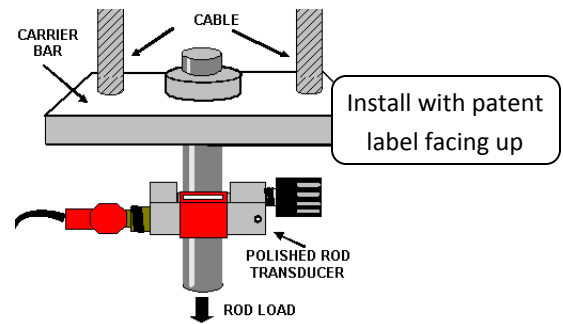

## 5 Start Acquisition

Click on "Setup PRT for new test" button

Tighten or Loosen PRT as instructed on the setup screen. When the circle is green, click the "Continue" button

## 6 See Results in Real-Time

Click on "Continue" button

## 7 Get Report

Click on "Report" button

Report can be printed or emailed

Select stroke to be analyzed and include in report